



www.BuyViewGuard.com



**ViewGuard™ Anti-Glare
Frameless Privacy Filter
Size Chart &
Attachment Manual**

▼ How to Measure

In order to ensure proper fit of your ViewGuard™ product it is critical that you measure your display properly. ViewGuard™ products are designed to seamlessly fit the respective display size so please review the following instructions carefully. All ViewGuard™ products are listed to include the product's applicable diagonal measurement, aspect ratio and width and height measurements.

Instructions:



1. Measure the width of only the display's viewing area excluding any plastic framing.



2. Measure the height of only the display's viewing area excluding any plastic framing.

▼ Sizing Chart

Please reference the measurements listed below against the measurements of the viewable area of your display.

<u>Diagonal Screen Size</u>	<u>Format</u>	<u>Width</u>	<u>Height</u>	<u>Aspect Ratio</u>	<u>Product ID</u>
8.9"	Widescreen	7.63"	4.58"	10:6	VG-10895
11.1"	Widescreen	9.69"	5.43"	16:9	VG-11115
12.1"	Standard	9.72"	7.28"	4:3	VG-11210
12.1"	Widescreen	10.29"	6.44"	16:10	VG-11215
13.1"	Widescreen	11.42"	6.42"	16:9	VG-11315
13.3"	Widescreen	11.28"	7.05"	16:10	VG-11335
14.1"	Standard	11.26"	8.43"	4:3	VG-11410
14.1"	Widescreen	11.96"	7.48"	16:10	VG-11415
15.0"	Standard	12.00"	8.99"	4:3	VG-11500
15.4"	Widescreen	13.09"	8.18"	16:10	VG-11545
16.0"	Widescreen	13.95"	7.84"	16:9	VG-11605
16.4"	Widescreen	14.29"	8.04"	16:9	VG-11645
17.0"	Standard	13.30"	10.64"	5:4	VG-11700
17.0"	Widescreen	14.49"	9.06"	16:10	VG-11705
18.1"	Standard	14.14"	11.31"	5:4	VG-11812
18.4"	Widescreen	16.04"	9.02"	16:9	VG-11845
19.0"	Standard	14.83"	11.89"	5:4	VG-11900
19.0"	Widescreen	16.10"	10.10"	16:10	VG-11905
20.0"/20.1"	Standard	16.08"	12.07"	4:3	VG-12000
20.0"/20.1"	Widescreen	17.09"	10.69"	16:10	VG-12005
21.0"	Widescreen	17.82"	11.15"	16:10	VG-12105
21.3"	Standard	17.06"	12.80"	4:3	VG-12130
21.6"	Widescreen	18.25"	11.48"	16:10	VG-12165
22.0"	Standard	17.64"	13.23"	4:3	VG-12200
22.0"	Widescreen	18.70"	11.71"	16:10	VG-12205
23.0"/23.1"	Standard	18.52"	13.89"	4:3	VG-12300
23.0"	Widescreen	19.52"	12.21"	16:10	VG-12305
24.0"	Widescreen	20.37"	12.74"	16:10	VG-12405
25.5"	Widescreen	21.62"	13.51"	16:10	VG-12555
27.0"	Widescreen	22.92"	14.33"	16:10	VG-12705
27.5"	Widescreen	23.40"	14.60"	16:10	VG-12755
30.0"	Widescreen	25.46"	15.92"	16:10	VG-13005

Package Contents



ViewGuard™ Anti-Glare
Frameless Privacy Filter



6 Transparent Self-Adhesive
Filter Holding Tabs



Cleaning Cloth


▼ Usage Recommendations

- For best results use your ViewGuard™ Anti-Glare Frameless Privacy Filter in a well-lit environment.
- If required, adjust the brightness of your display to your desired level.
- Your ViewGuard™ Anti-Glare Frameless Privacy Filter should only be used as a privacy filter for computer monitors. Please do not use it for other purposes.
- Please do not clean your ViewGuard™ Anti-Glare Frameless Privacy Filter with abrasive materials, as it may damage the special coating.
- Please do not bend or drop your ViewGuard™ Anti-Glare Frameless Privacy Filter.


▼ Attachment Instructions



1. Clean the surface of the monitor with a non-abrasive, lint-free cloth.

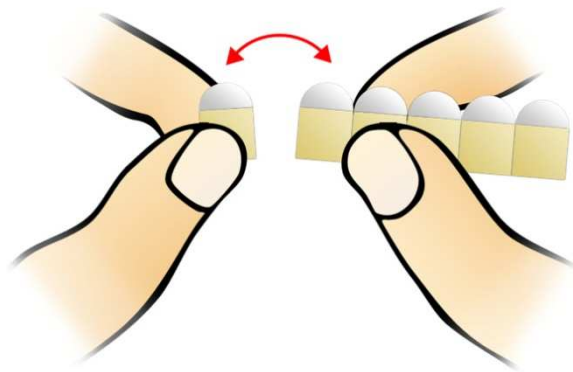


2. Separate Self-Adhesive Filter Holding Tabs.

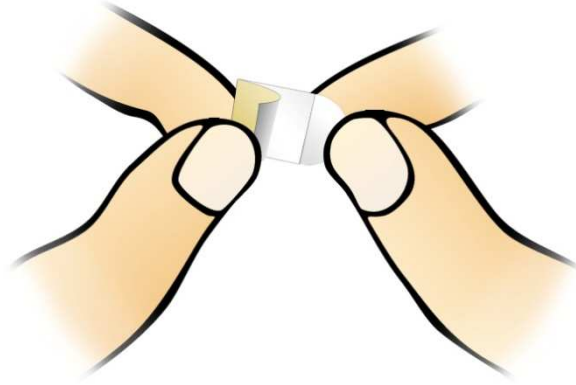

3. Remove the protective vinyl from each Holding Tab.




4. Attach each Holding Tab similar to as demonstrated in the picture above. Place two tabs on the bottom, two on the right side, and two on the left side, as shown.

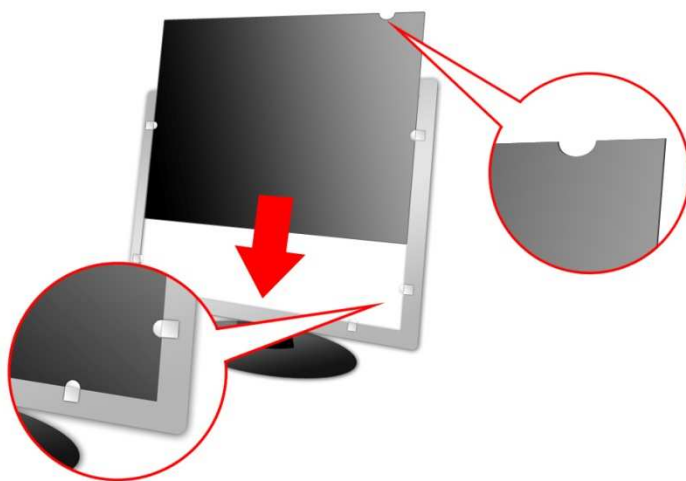

5. Insert the filter between the Holding Tabs and the screen. It is recommended that the indentation be located at the top-right corner of the screen, as demonstrated in the picture above, in order to take advantage of the anti-glare finish.


▼ **Additional Attachment Options (Coming Soon)**

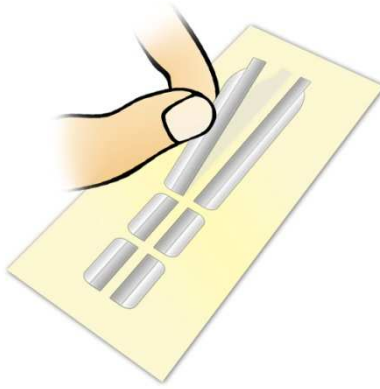


1. Remove Self-Adhesive Filter Holding Tabs from paper backing.



2. Attach each Holding Tab similar to as demonstrated in the picture above. Please ensure the tab is attached to extend slightly past the lower plastic framing of the screen.

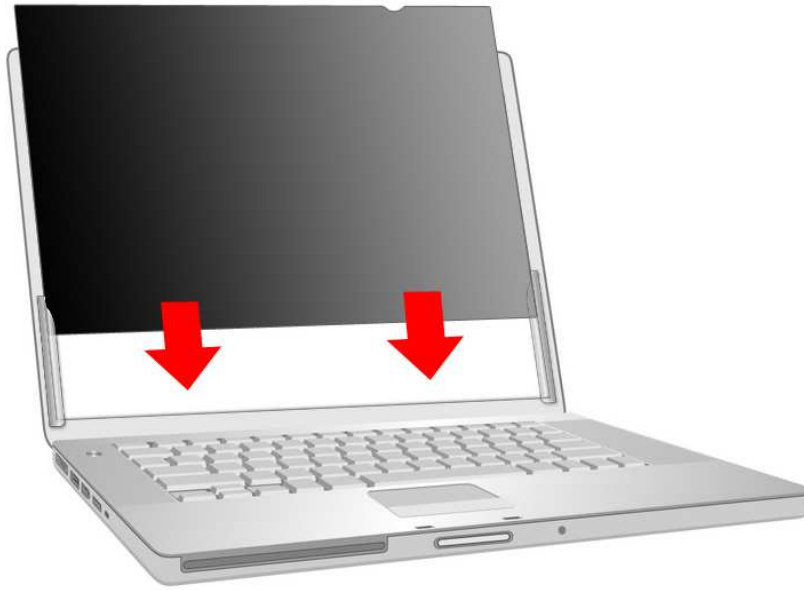

3. Insert the filter between the Holding Tabs and the screen. It is recommended that the indentation be located at the top-right corner of the screen, as demonstrated in the picture above, in order to take advantage of the anti-glare finish.

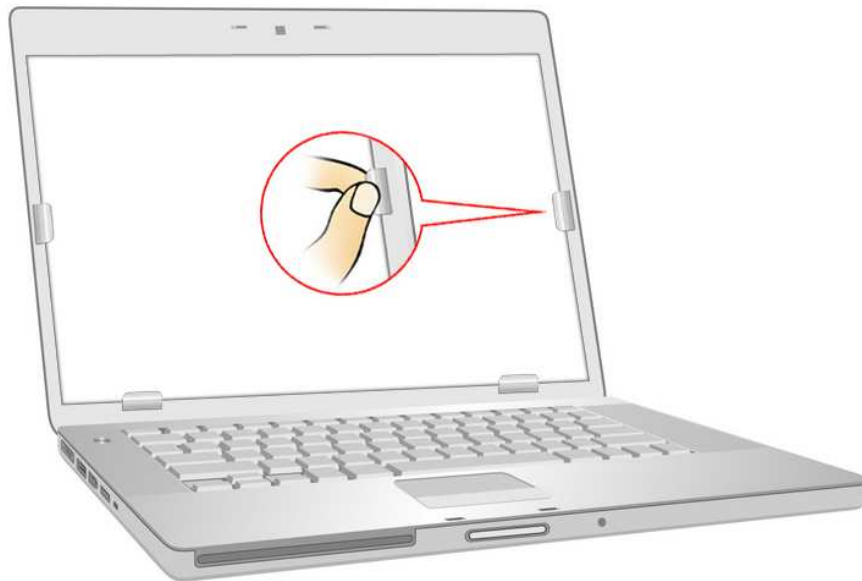

4. Alternatively, you can use the additional tab design and attach each Holding Tab similar to as demonstrated in the picture above. Place two tabs on the bottom, one on the right side, and one on the left side, as shown. Please use additional Holding Tabs, as needed, for larger screen sizes.

▼ Additional Attachment Options (Coming Soon)



1. Remove the residue-free adhesive squares from the plastic backing and attach each adhesive firmly similar to as demonstrated in the picture above. Once attached, please remove the plastic cover of each adhesive square. Please use additional residue-free adhesive squares, as needed, for larger screen sizes.



2. Attach the filter to the screen as demonstrated in the picture above. The adhesive strength of the residue-free adhesive squares increases with time so please allow 1-2 days for the adhesive strength to set. It is recommended that the indentation be located at the top-right corner of the screen in order to take advantage of the anti-glare finish.

▼ **How to Care for your ViewGuard™ Anti-Glare Frameless Privacy Filter**



Please clean your ViewGuard™ Anti-Glare Frameless Privacy Filter with a non-abrasive, lint-free cloth.



www.BuyViewGuard.com